




RV 5400 SW / RV 5500 SW / RV 5600

Spare Parts

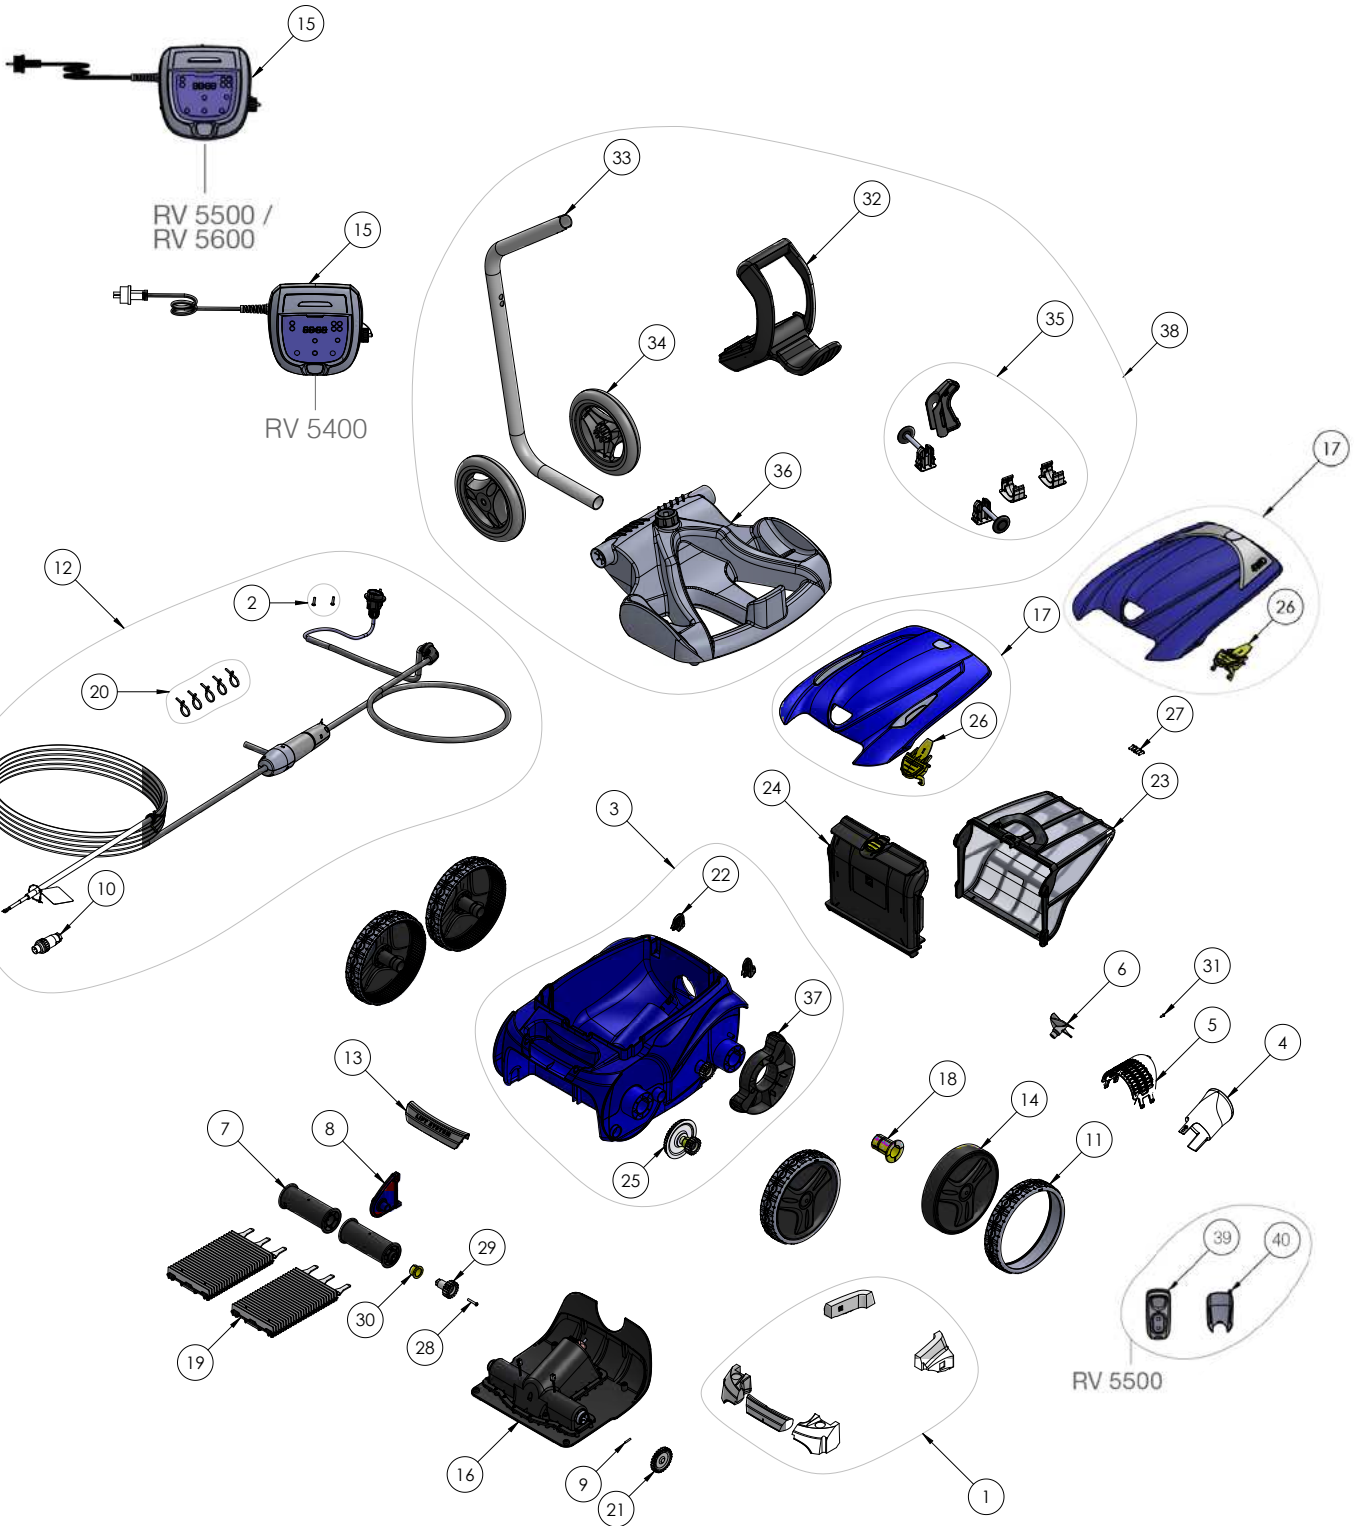

Position	Description	RV 5400	RV 5500	RV 5600
1	Float		R0539700	
2	Screw 4*16mm (Set of 5)		R0608500	
3	Main housing 4WD blue		R0539200	
4	Flow Outlet		R0517500	
5	Motor screen		R0517600	
6	Propeller		R0517000	
7	Brush roller		R0517400	
8	Roller support		R0518700	
9	Motor block Shaft pin (Set of 5)		R0567800	
10	Floating cable plug		R0565600	
11	Tire Large ral9022 zodiac		R0636200	
12	Floating cable 18m swivel	R0726600		
	Floating cable 21m swivel		R0726700	
	Floating cable 25m			R0713200
13	Handle RAL9022 LS		R0636501	
14	Rim Large black zodiac		R0636000	
15	Control Unit Type 3v	R0637100		
	Control Unit Type 4v		R0637200	
	Control Unit Type 10v			R0713400
16	Motor block Type c	R0638000		
	Motor block Type d		R0638100	
	Motor block Type d			R0638100
17	Hood blue deco	R0595900		
	Hood blue spoiler			R0596000
18	Wheel bushing zodiac		R0636700	
19	Brush (Set of 2)		R0638800	
20	Floating cable clamp (Set of 5)		R0567900	
21	Drive gear (Set of 2)		R0518800	
22	Roller (Set of 2)		R0518100	
23	Fine filter v		R0636600	
24	filter canister support		R0517700	
25	Transmission		R0517200	
26	cover latch grip PMS108		R0638700	
27	Screws 4*12 mm (x5)		R0516700	
28	Screw 4*25 mm (Set of 5)		R0638900	
29	17 Gear (*2)		R0639000	
30	Outer bearing (*2)		R0639100	
31	Screw 2.9*9.5 mm (Set of 5)		R0639200	
32	Caddy Handle		R0565000	
33	Caddy tube		R0565200	
34	Caddy wheels (*2)		R0565100	
35	Caddy Accessories		R0564900	
36	Caddy base		R0564800	
37	Cover wheels protection		R0540300	
38	Complete Trolley		R0609100	
39	Remote Control holster	-		R0548500
40	Remote Control zodiac	-		R0548400